

## PLAZA FLOORING TILE

## **INSTALLATION AND MAINTENANCE**

## **INSTALLATION**

Surface should be relatively flat, smooth and level. Prior to installation the base should be thoroughly cleaned and any sharp objects removed. Sweep or brush area to remove all loose dirt and dust. Wipe up any oil and chemicals from the floor before installing flooring tiles.


Plaza flooring tile can be loose laid on a flat surface.

Colour consistency of the tiles and the batch identity, control number on the package label, are to be checked before the installation.




Tiles can be installed in minutes, without the use of special tools. Interlocking modular tiles allow you to create a flooring of any length and width.

Joining tiles together is very easy with a hammer or rubber mallet.

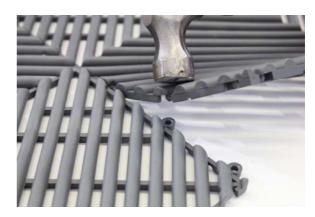

For custom fit, allow product to relax and lay flat in place before trimming around edges and corners. If product is used under extreme temperature conditions, the product may expand or contract about 1-2% after laying flat.

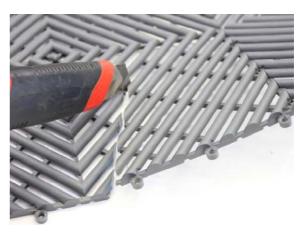



Take note of holes, posts, radiators etc.. Fit each mat into place and make necessary cuts with snap-off knife or secateurs.



**CLEANING AND MAINTENANCE** 

The performance of flooring is dependent how well it is maintained. Plaza flooring should be regularly cleaned and maintained to ensure that the mat maintains its effective performance, as well as ensuring a long life span for the product.

Regular cleaning of the Plaza flooring is recommended in order to keep the flooring looking new and maintaining a presentable interior.

Top surface of Plaza is easy to clean by using a vacuum cleaner.

Sweep or mop the surface of Plaza flooring regularly. Mild soaps and normal household detergents may be used. Do not leave harsh detergents or chemicals on product or wash into sewer system.

Normal household cleaners may be used to increase longevity and to remove stubborn debris.

Plaza flooring is not a stain-proof product—certain dyes, inks, rubber tires, and chemicals may cause permanent staining.

Never use harsh chemicals such as tar remover or kerosene on this flooring.

Any floor surface can become slippery in the presence of moisture and debris. Proper care and cleaning of flooring will reduce the likelihood of slips and falls.

Connections of modular tiles should be checked regularly and damaged tiles should be replaced immediately. Due to interlocking modular system, it is very easy and inexpensive to replace a damaged tile with a new one.



01900 Nurmijärvi FINLAND Tel: +358-9-290 22 20 Fax: +358-9-250 48 07 info@muovihaka.com www.muovihaka.com