

LAGUNE WET AREA MAT INSTALLATION INSTRUCTIONS

Surface should be relatively flat, smooth and level. Brush the surface area where Lagune mats are to be installed. Prior to installation the floor should be thoroughly cleaned and any sharp objects removed. Sweep area to remove all loose dirt and dust.


Lagune wet area mat can be loose laid on a flat surface. Lagune is designed for both indoor and outdoor use.

Tiles can be installed in minutes, without the use of special tools. Size of Lagune tile is 20x20 cm. Interlocking modular tiles allow you to create a wet area mat of any length and width.

Take measurements of the matting area. Join Lagune tiles together into rolls for the transportation and deliver on site.

The matting should be unrolled on site with the drainage on the bottom face and positioned in accordance with the layout plan.

Lagune tiles are very easy to cut to size and shape. Take note of holes, posts, radiators etc. If mats need to be cut, make necessary cuts first on site. Fit each mat into place and make necessary cuts with snap-off knife or secateurs.

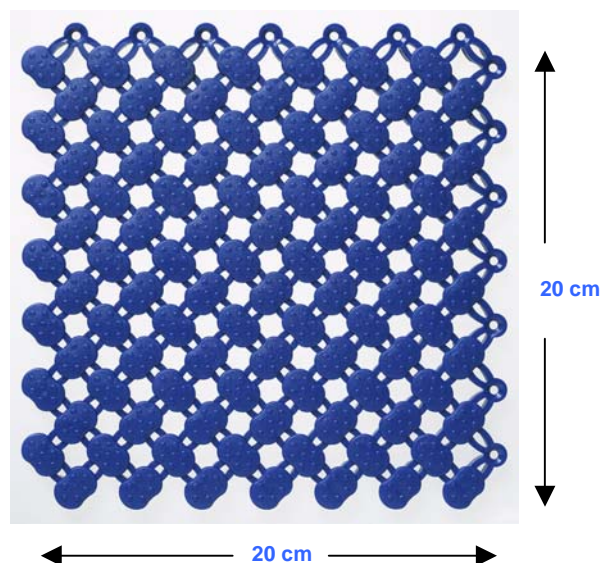

Joining tiles together is very easy. Turn tiles upside down and connect tiles with a hammer.

